

The new TV Collection box lets you browse the entire Mediaseva Video and Audio library. It can update itself with the latest online releases, show the Live Broadcasts and display PDF files, including the latest Bhajan Book and Sant Mat Castellano archive. If there is a major problem, Mediaseva staff can remote into your unit to help.

Setup:

1. **Plug the flat micro-USB plug cable into the hard disk connector** located on the top rear of the unit.
2. **Connect the TVC to a flat-screen TV** using the included HDMI cable. *Push the connectors in tightly!*
3. **Connect to AC Wall Power:** The power adapter plugs into the wall or a surge protector (recommended). The round plug goes into the socket at the far right on the back of the unit. The unit should turn on right away. **The forward edge of the TVC should face the room, so that the remote and keyboard work properly.**

What happens next:

The Main Menu with Master's photo will usually appear for a short time.

*** Wait 15 more seconds for a grey screen that says "USB drive connected."**

*** Do not select any options from the grey screen.**

*** Just Press the Back or Esc button on the Remote Control** to return to the Main Menu.

Now you can browse Satsangs, Bhajans and Books, or go to the next step to set up your internet.

4. Set up Internet:

If you have an Ethernet cable, connect it to the socket on your unit. Back out to the Main Menu. You're done!

If you use WiFi: Click on Set up Internet. Then Click Network. Click Turn on Wifi if it is not on already.

Select your Wifi access point and type in your password. In a few seconds, you should get the message "Connection Successful." Back out to the Main Menu. You're done!

*** If you ever find yourself on an unfamiliar screen, Back out (Esc) to the Main Menu, or press Home.**

*** If you power off the unit from one of the inner menus, the unit should display the same menu the next time you power it up. This is handy if you are watching a series of Satsangs.**

*** If you really get stuck, it's OK to pull out the power adapter, wait a few seconds and plug it back in.**

Main Menu Choices:

1. Use **Satsangs, Bhajans and Books** to browse through the TV Collection. The File Browser app is simple: select a media file using the up and down keys and press OK. ***There is never a need to use the left or right arrows when selecting a file. If a yellow box appears on the top menu, deselect it (click on it) using the remote control or trackpad.*** The trackpad is also great for selecting files. Just move the cursor, then double tap or press either of the keyboard's left-click buttons. (Be sure to "wake up" the keyboard first. See Mini Keyboard Tips on the reverse side.)

2. Use **Update** at any time to receive the latest TVC documentation and new video files. Click on S3Anywhere to begin. At the far right of the screen, press SYNC. If your unit is up to date, in five to ten minutes a message "No Changes" will appear, otherwise the unit will download new files. A new Delhi program can take 8 hours or more, depending on the speed of your internet. If the internet connection is lost, the unit can later resume the download from where it stopped. When the update is complete, the screen will show a report of the files that were updated. You can now back out to the Main Menu, and browse over to view new Satsangs or other updates.

3. The **Live Broadcast** selection uses the Puffin Web Browser to display the Livestream Santmat channel. Once the website is loaded, if you don't see the slideshow, press the "Play" icon in the middle of the screen.

Note: If you use the Arrow keys to navigate around the page, the image may zoom to full screen, which makes it harder to navigate. If this happens, double left-click the mouse on the black space *between* the main video window (on the left) and the white chat room window (on the right of the screen.) This should zoom back out to normal size. If anyone knows how to avoid this issue please let us know!

4. The **Set Up Internet** menu item is needed to install the TVC box, as detailed in the Set Up instructions.

5. **Tech Support** is used only if an unusual problem arises after the unit is set up. In that case, you can grant permission for a Mediaseva staff member to remote control your TV Collection and diagnose problems, regardless of your location. The software used is TeamViewer, which is effective and secure.

Important Tips for using your TV Collection

The Remote Control is all you need to browse video, audio and PDF files.

- * Navigate through menus using the arrows in the blue circle. Press OK in the middle to select items.
- * The Home key looks like a small house. It's located above the left arrow. Use it to return to the top menu.
- * The back arrow button has a small curved arrow, and is located above the right arrow button. Use this to return to a previous menu, or all the way back to the main menu.
- * The Mouse button has a tilted arrow, and is located below the left arrow button. This makes a cursor appear on screen, and you use the arrow keys to move the cursor. Press the Mouse key again to turn off the mouse function.
- * The menu key can display more info about any selection. It's located below the right arrow, but is used rarely.
- * The KODI key is never used. It launches an app which is not needed for viewing videos.
- * **The red Power button is the only way to turn off the unit.**

Verify that the small hard drive light has turned off also. The Leelbox unit can occasionally supply power to the drive even after shutting down. This causes blinking and could reduce the life of the drive. If the hard drive light keeps blinking after you turn off the unit, unplug the power adapter from the wall. Plug it in the next time you use it. It's recommended to unplug the power adapter during lightning storms, just like any computer.

The Mini Keyboard helps you view videos & Broadcasts, Update your unit, or Set Up Internet.

- * Turn the keyboard on or off with the power switch, located on the edge, at the upper right of the trackpad.
- * **The keyboard goes into power save mode after ten seconds of inactivity. Press any arrow key to wake it up,** then use the buttons or the trackpad as you wish.
- * To pause a video, either left-click twice or double-tap the trackpad. Click or tap again to resume.
- * To advance a video, press left-click and drag the bright white circle with the trackpad.
- * While viewing a PDF document, left-click on the document or tap the trackpad to change to full-screen.
- * If you need to type, an onscreen keyboard will often pop up, blocking part of the screen. Press Esc to close it.
- * If you are going to be away from the unit for a few days, turn off the keyboard to save battery juice.
- * In normal use, a blue LED will glow as you press a button or use the trackpad.
- * If you prefer lighted keys, hold down the Fn key and tap F2. Battery life is shorter when using the backlight.
- * *A yellow LED will glow when the battery is low.* Recharge the keyboard with the short USB cable. A red LED glows during charge. If you need to use the keyboard immediately, charge it with any Micro-USB cellphone charger while you use it. This is handy when you need backlit keys. Disconnect the cable after charging.
- * The Home, Back, and Menu buttons on the Remote Control are duplicated near the trackpad of the keyboard.
- * In a few situations, a left-mouse click works better than pressing the OK button. If you always use the left-click buttons to select items, you will avoid problems.
- * The Esc key at the left of the keyboard does the same thing as the Back button.
- * Consult the keyboard manual for complete details.

Troubleshooting:

- * Make sure that the Remote Control and Keyboard are pointed at the front edge of the TVC unit.
- * If the keyboard doesn't work, wake it up. If the blue light does not glow when you press a button, it could need to be charged. If the blue LED glows OK but the screen does not respond, either press Fn and tap F1 to sync up the keyboard, or turn the power switch off, wait four seconds and turn it on again.
- * If the keyboard still doesn't work, or the TVC unit as a whole seems unresponsive, unplug the small power adapter that feeds the TVC unit. Wait five seconds and plug it back in. The device should restart and work fine.
- * If nothing works after reading this guide, please send an email to mediaseva@gmail.com. **Note that the Tech Support option is not available until your unit is successfully connected to the internet. If you find it difficult to connect your TVC unit to the internet, please find a local tech resource to assist you.**

Note 1: If your TVC ever "forgets" how to play a media file, a dialog box will ask you how to continue: Movie Player is **always** used for videos, Music for audio MP3s, Quickpic for photographs, Adobe Acrobat for PDF (printed publication) files, and Root Explorer for TXT (help) files.

Note 2: We strongly recommend against adding new apps to the TVC unit. Thank you for understanding.